

Quota viewer with encoder input.

With the pulse correction coefficient, the instrument adapts each encoder pulse to the desired measurement unit: m, cm, mm, °, etc.


You can change the position absolute value, without making machine zero, setting a value from the keyboard and storing the new displayed position. The quota reset is made with external remote pulse (reset) or by pressing together the two arrow keys on the front.

The instrument is suitable for interfacing only with 2 out-of-phase signals transducers as an encoder; it is not suitable for single-signal transducers (photocontrollers, proximity, mechanical contacts). When switched off, the storing operation is made on eeprom without using buffer batteries.



### Technical features

Power supply	24Vac/dc +/- 10%
Absorption	4 VA nominal
Display	6 digits H= 13mm
Full scale max value	from -99999 to 999999
Resolution	+/- 1 digit on f.s.
Count frequency	2100Hz on 4 fronts
Operation conditions	0.. +55°C / 20..90% R.U. without condensation
Storage conditions	-25.. +80°C / 20..90% R.U. without condensation
Mounting	recessed mounting
Container	Black ABS
Protection degree	IP30

### Electrical connections

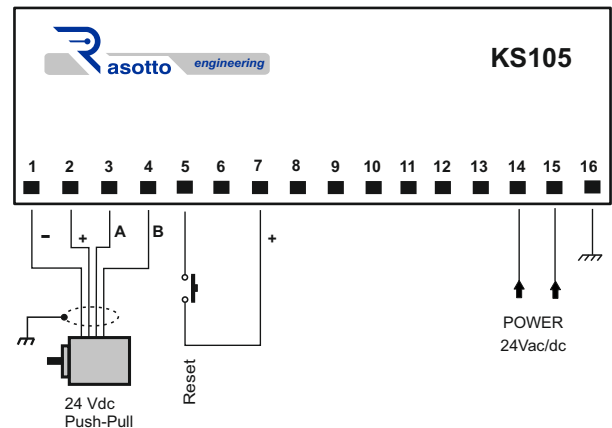



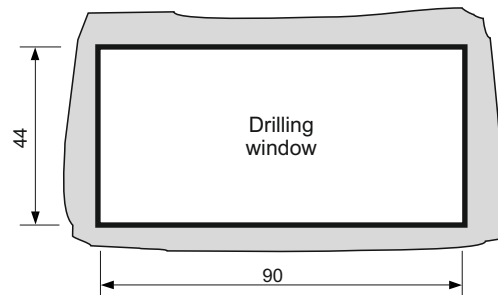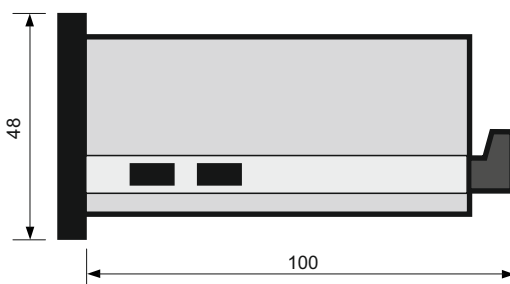




### Dimensions




## Operation cycle




When switched on, after displaying the product name and the firmware version, the instrument displays the encoder position value stored when the instrument is switched off.


### Technical parameters programming




To enter programming press the **F** key, the message **PASS** appears, press  and using the keys   enter the password **569**, confirm with the key  and it will be displayed **dP** **dP** represents the decimal point. To change the decimal point position, press the key  and using the keys  , put the decimal point in the desired position.


As soon as a key is released, the set DP value will flash; to continue with the programming

press the key  and it will be displayed **COEFF** representing the multiplication coefficient of the encoder pulses.

To change the coefficient value press the key  and use the keys   to enter the desired coefficient value. As soon as a key is released, the set coefficient value will flash; to continue

with the programming press the key  and it will be displayed **POS** representing the current position that is

shown on the display. To change the current position value, press the key  and using the keys   enter the desired position value. As soon as a key is released, the set position value will flash;

to continue programming, press the key  and you will return to the programming beginning ie **dP**

If you wish to end programming, wait for the display to stop flashing.

### Technical parameters description

**dP** **Decimal point** : decimal point that can be positioned in the six display digits.

**COEFF** **Coefficient** : multiplication value of encoder pulses according to the following formula:

$$\text{Coefficient} = \text{number of encoder revolution pulses} \times 100 \times \text{dP} / \text{revolution quota} \quad (\text{min } 0.01 \text{ max } 655.30).$$

**Number of encoder revolution pulses**: pulses generated by the encoder in one revolution (see encoder technical data)

**Revolution quota**: measurement carried out by the machine in one encoder revolution (measured on the machine)

**dP** : based on the set decimal point position, dP can have the following values






















- 1 if you set the decimal point on the first digit on the right
- 10 if you set the decimal point on the second digit from the right
- 100 if you set the decimal point on the third digit from the right
- 1000 if you set the decimal point on the fourth digit from the right
- 10000 if you set the decimal point on the fifth digit from the right

With a 1.00 coefficient, the instrument displays the encoder pulses.

**POS** **Actual position** : current position shown on display modifiable with the arrow keys (min -99999 max 999999)

Pressing the arrow keys   together brings the displayed value to zero.

### Coefficient automatic calculation

To enter programming press the key  the message **PASS** is displayed, press the key   
 and using the keys   enter the password **375**, confirm with the key  and it will be displayed **PoSIZ.1**  
**PoSIZ.1** represents the machine starting position. Move the machine to a known position and then press   
 It will be displayed **dP** again  and using the keys   move the decimal point to the desired position.  
 Press  it will be displayed **qUotA1** again  and using   enter the initial quota value,  
 again  and it will be displayed **PoSIZ.2**. Move the machine to a second known position and then with   
 the message **qUotA2** will come out, again  and using the keys   enter the final quota value, press   
 and it will be displayed **CALc.CO** again  and wait for the automatic coefficient calculation; at the end you will see the  
 new coefficient value, confirm with  and you will exit the automatic coefficient programming menu.

**ATTENTION:** if, at the end of the coefficient calculation, the **Er.coEF** message will be shown, it means that the calculated value is not between 0.01 and 655.30 (min and max coefficient values). In this case, check if you followed the procedure correctly and/or check the encoder selection or the quotas to be displayed.

